

BOP Ram Setup

Instructions

Rams are Uni-directional and must be flipped over if installation is different than our standard factory orientation.

Standard Orientation is **PIN** down and **BOX** up.

Rams are marked with a sticker that says “**THIS SIDE UP**”.

Failure to install correctly will result in
product failure.

End View



Angled View

